

QuizXpress Octobuzzy

Wireless



Contents of the Octobuzzy package

Item	Quantity
LED Buzzer	8
Remote control incl. 2xAAA battery	1
USB charging cable	2
Manual	1

Introduction

The QuizXpress wireless Octobuzzy is a stand-alone quiz buzzer system including 8 LED buzzers. With the help of the remote control, the buzzers can be operated up to 10 meters away. Every buzzers has a rechargeable Lithium battery which can be charged by using the supplied USB cables.

Step by step instruction



- 1) Activate the remote control by pressing the "power" button. Now press the button of each buzzer to activate the buzzers. Each buzzer first shows the battery level of the buzzer (see the section 'Charging buzzers' later in this document) and will then light up red.
- 2) Press the *Start* button on the remote control to activate the buzzers so that a question can be asked. The buzzers will light up green and the green light on the remote will start flashing. The buzzer of the player who presses the buzzer first will flash blue and play a sound. At the same time, the other buzzers will turn red and it is no longer possible for the other players to print. On the remote control, the number of the buzzer appears in the screen, which is pressed first.
- 3) Press *Continue* when the given answer is incorrect. The buzzer of the player who just pressed first will now turn red and be ruled out for the rest of the question. The other players now get the chance to press.
- 4) Press *Stop* to turn off all buzzers. The buzzers turn red. Go back to step 2) to ask the next question.
- 5) Press and hold the *Power* button to turn off the remote control and the buzzer.

Charging buzzers

The buzzers can be charged using the two included USB cables. Each cable can be used for charging 4 buzzers. The buzzer will turn red while charging. A buzzer will turn green as a sign that it is fully charged.

When the *Battery* button is pressed on the remote control, each buzzer will indicate by means of a color how far the buzzer is charged:

Green	100%
Blue	75%
Yellow	50%
Purple/Red	25%

Specifications

Dimensions	Buzzer: diameter 5CM, height 3CM;
Nutrition buzzers	Rechargeable lithium battery
Power supply remote control	2 x AAA battery
Range	Up to 10 meters

- Insert battery correctly into the base station, pay attention to the (+/-) indication.
- Remove the batteries when the system is not in use for an extended period of time.

Other possibilities

Press the *Mute* button on the remote control to turn off the sound of the buzzers.

Troubleshooting

When a buzzer is red in color and occasionally flashes, that means the buzzer is in contact with the remote. Make sure the remote is turned on. If this is the case, make sure the buzzer is not too far from the remote control (less than 10 meters).

Programming buzzers

The buzzers are paired with the remote and all have a number. In principle, this does not need to be changed.

If it is necessary to replace the number of a buzzer, proceed as follows:

- Press the *Mode* button on the remote control
- In get screen a number will appear
- Select the number that the buzzer should get by pressing the *Continue* button (number up) or the *Mute* button (number down).
- When the correct number is selected, press the *Start* button on the remote control.
- Now press the button of the buzzer that should get the new song 3 times in quick succession
- When the buzzer flashes green and the remote control displays *OK* in the display, the buzzer is paired with the new number
- After programming, press the *Mode* button again to reset the remote control to normal mode.

Contact

For further questions please feel free to contact us via ino@gameshowcrew.com or visit our website www.quizpress.com.

