

QuizXpress Standalone remote three sounds



Power Button

Use to switch on the remote control. After switching on the remote control, press all buzzers that are going to be used one by one. The buttons will light up red.

In order to turn off the system, press the power button again.

Start

To start a question, press the Start button. The buzzer knobs light up green to indicate they are ready to be pressed.

The buzzer of the first person that presses the buzzers lights up and a sound is played by the buzzer.

Green checkmark

When the person gave the correct answer, press the green checkmark. The buzzer button now lights up green and a sound is played indicating the answer was correct.

Red cross

When the person gave the wrong answer, press the red cross. The buzzer button now lights up red and a sound is played indicating the answer was incorrect.

Continue

After a wrong answer has been given , press Continue. The buzzer of the person who answered incorrectly will be locked out (it will remain red), the other buzzers will light up green, meaning they are ready to be pressed again. (Note : you can also continue when a correct answer has been given. In this case the buzzer is also locked out).

Stop

Stops the question, buzzer are all red and cannot be pressed

Answer (not applicable for the QuizXpress cubes)

Can be used for multiple choice questions. after pressing the answer button, the player who was the fastest buzzer can send over A,B,C or D to the remote control by pressing one of the multiple choice buttons on the buzzer. The answer given will appear on the remote control. After seeing the answer on the remote control, press the green or red checkmark as described above.

Mute

If you do not want any sounds to be played, press the Mute button

Mode button

The buzzer system has three modes. By pressing the Mode button you can switch between these modes. The currently selected mode is indicated on the remote control by a small dot on the right hand side of the presentation screen of the remote. The modes are:

- 1) The Normal mode – this is the mode that is described above in the manual
- 2) Set Max ID – Use this to set the ID of the highest buzzer that is used. In order to do this, use the green checkmark and the red checkmark to resp. increase \ decrease the ID. When the ID has been selected, press the Start button.
- 3) Set Buzz ID – Assign an ID to a buzzer. Select the ID that you want to assign by pressing the green checkmark and the red checkmark to resp. increase\decrease the ID. Then the ID has been selected, press the Start button. The display will now show ">>>". Now, on the buzzer that you wish to assign the ID, press the B button + the big button of the buzzer. It will now flash a green light and the remote will display 'OK' indicating that the buzzer was correctly assigned the ID.

F1 – F2

Currently not used