

Octobuzzy User guide



1. Product list and image

item	Quantity pc(s)
Master controller	1
Buzzer	8
Cable	8
User guide	1

Master controller Instruction




Specifications

Size	Controller: 12X12X12CM; Buzzer: diameter 5CM, height 3CM; Connect cable: 1 meter
Connect Cable	3.5mm Jack round cable
Support buzzers	One controller support up to 8 buzzers
Battery	Controller: 2 AA battery; (buzzers do no need a battery)


Note:

- ₁. Insert batteries correctly by matching the (+/-) markings
- ₂. Remove the batteries when they are depleted or not using the system for a longer period of time.

Quick step by step guide:



Step one—Turn on System. Press “power”  button on controller, all buzzers light on and off quickly, LED display 0..

Step two—Start an activity. Press “Start”  button on controller, all buzzers light on. All players can press the push button for rush. The first one who pressed the push button, his/her buzzer will flash with green light and buzz audio will play as well. Other buzzers light turn off and locked-out.

Step three—Continue. Press “Continue”  button on controller, other players can press push button for rush.

Step four—Power off. Hold press the “Power”  button for a long time, the system will power off

Other features

○₁ Mute: Press the “Mute”  button on the controller to mute the sound, LED lights on as  .

2. Note and Trouble shoot

- ₁ If the brightness is not clear anymore, please replace batteries.
- ₃ If the master controller can't control a buzzer, please re-plug it in and try again.